



HIGH PERFORMANCE STROLLERS

Assembly Instructions



City Select

**Amazing 360° Turns
Make For Extreme Maneuverability**

*Read these
instructions carefully
before use and
keep them for
future reference.
Your child's safety may be
affected if you do not follow
these instructions.*




WARNING: Ensure all locking devices are engaged before use.

For the sake of your precious cargo, please read these warnings before using your stroller.

-  • **WARNING:** DO NOT exceed 3mph – this stroller is not suitable for running, jogging, skating or roller blading.
-  • **WARNING:** Prevent serious injury to your child by always using the safety harness.
-  • **WARNING:** Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
-  • **WARNING:** Never leave your child unattended.
-  • **WARNING:** Recommended weight for seat pocket is 2 lbs and basket is 15 lbs. Excessive weight may cause a hazardous unstable condition to exist.
-  • **WARNING:** Stroller is not meant to be used for transporting children up or down stairs. Damage resulting to stroller will not be covered under warranty.
-  • **WARNING:** Child may slip into leg openings and strangle. Never use in reclined carriage position unless safety harness is properly fastened.
-  • **WARNING:** Child may slip into leg openings and strangle. Never use in reclined carriage position unless safety harness is properly fastened.
- Accessories which are not approved by the manufacturer or distributor shall not be used.
- The passenger shall remain seated (no standing in the stroller).
- Watch out for cars – never assume that a driver can see you and your child.
- Total weight load recommended for this stroller is 45 lbs / 20.4 kg per seat (combined passenger and baggage weight).
- This stroller seats one passenger. Additional accessory items may be purchased to seat more than one passenger. (Maximum Passenger Loaded: 2 Passengers/per stroller)
- It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer.
- Always have your brake locked when loading and unloading of children.


NOTE: The sample product illustrated in this manual may differ slightly from your production quality City Select. However, this will not affect the assembly or functionality of your Baby Jogger product.

Frame

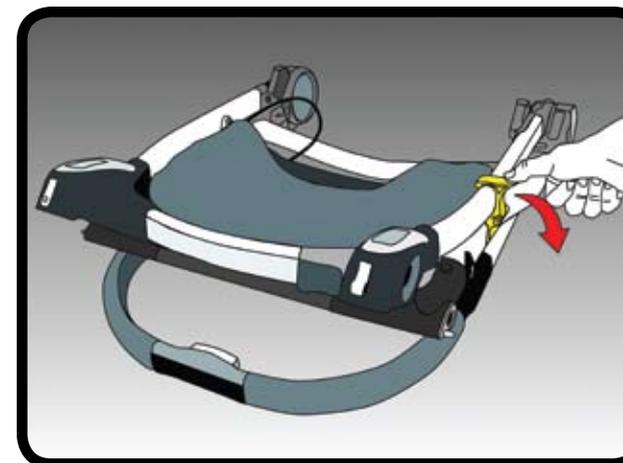

1 Unpack stroller from box and set wheels aside.


2 Unsnap storage lock from around the frame.

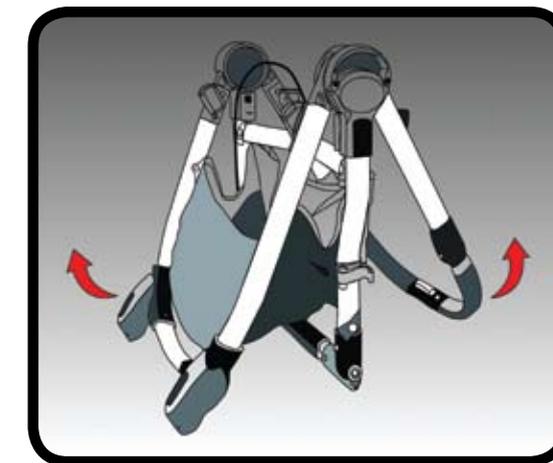

3 Pull bottom of frame up and away from handlebar.




4 The stroller frame will click into place.

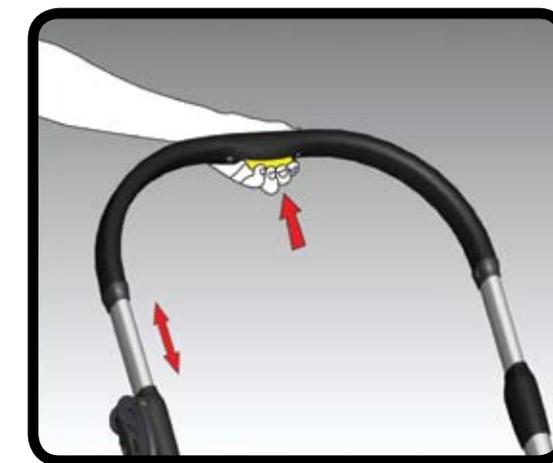


5 To adjust handle length: Simply squeeze gray button on handle and slide the handle up or down to the desired length.


Front Wheel

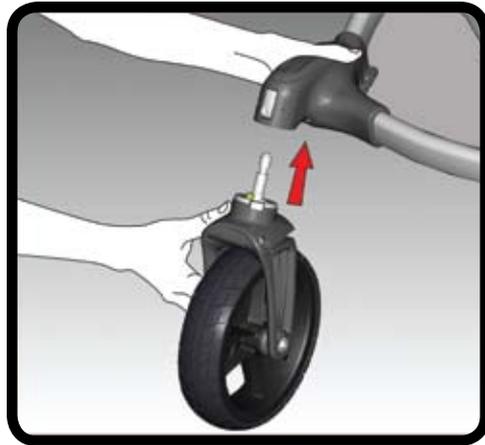


1 To install front wheel: Lift up slightly on the front left portion of the stroller frame. Align the round opening on the wheel mount with the front wheel axle. Slide the front wheel into opening until it clicks into place. Repeat on other side.

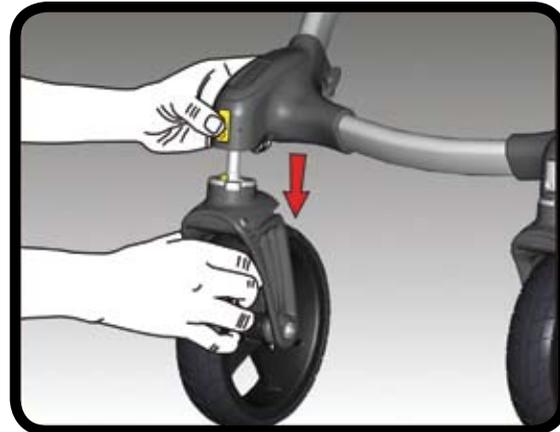

2 To remove front wheel: Press gray tab on front wheel mount and slide front wheel out.

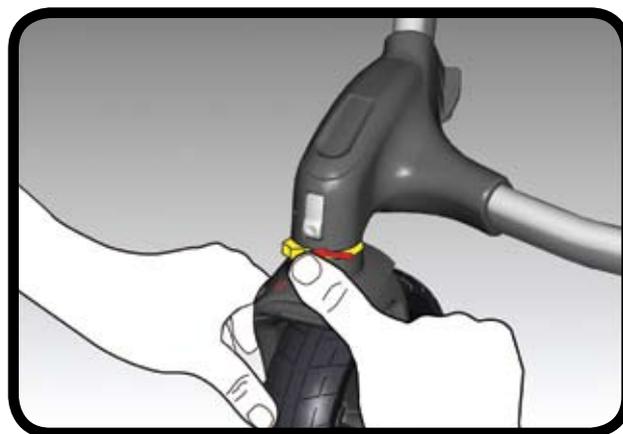

3 To engage stationary wheel: Slide gray lever, located above front wheel, to the left. Repeat on opposite side.

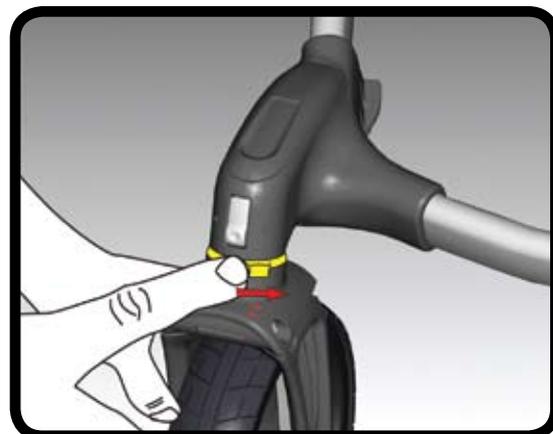


4 To engage swivel wheel: Slide gray lever, located above the front wheel, to the right to engage swivel. Repeat on opposite wheel.

Rear Wheels




1 To install rear wheel: Gently slide the rear wheel's axle into the hole in frame until the wheel clicks into place.

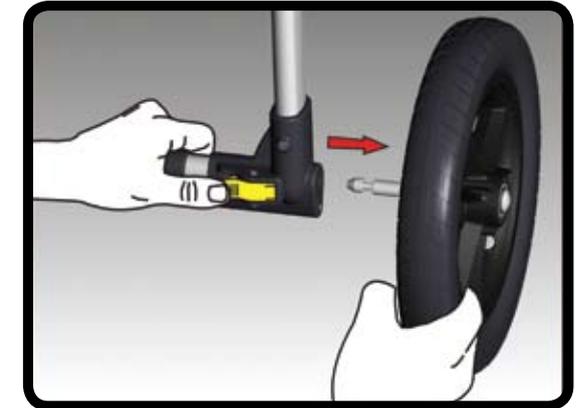

2 To remove rear wheel: Simply press the wheel button while gently sliding the wheel away from the frame.

Brake

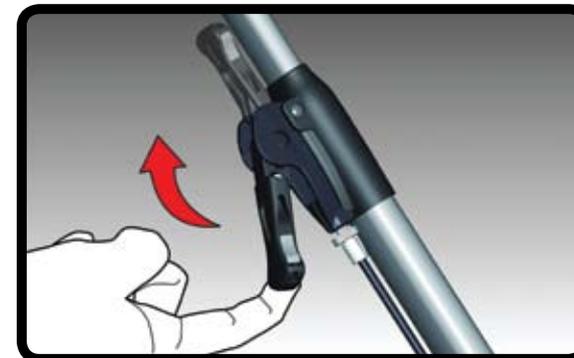

• To engage parking brake: Gently pull brake lever into upright position until it clicks into place.



• To release parking brake: Pinch gray tabs and pull towards you. Push brake lever down until it is parallel with the frame.


Safety Harness




1 Unclip top of shoulder strap from the seat and re-clip on the seat loops closest to your child's shoulder height.



2 To adjust the shoulder and crotch strap length: slide the plastic guide up or down to lengthen or shorten.

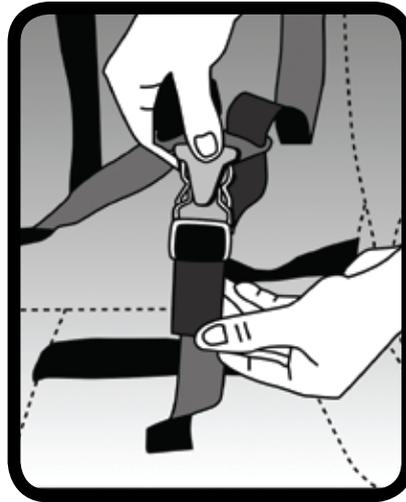


3 To buckle the harness: Simply push top right buckle into center buckle until it clicks into place. Repeat on other side.


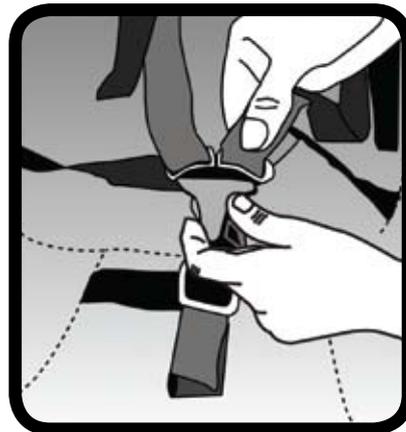


4 To unbuckle harness: Push one side of the center button and pull the corresponding side buckle away from the center buckle. Repeat to unbuckle other side.

Canopy

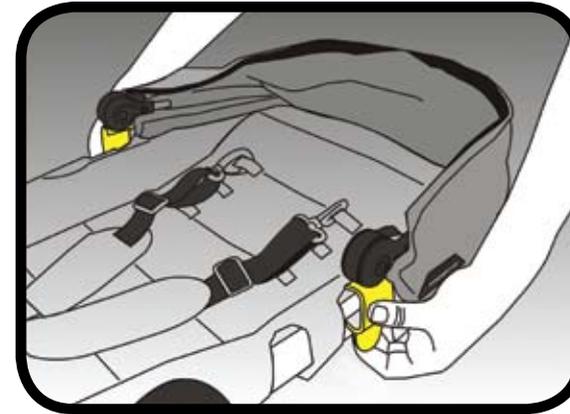


1 To attach canopy to frame: Attach canopy brackets to sides of seat frame. **NOTE:** There are two canopy attachment locations to be used depending on the height of your child.

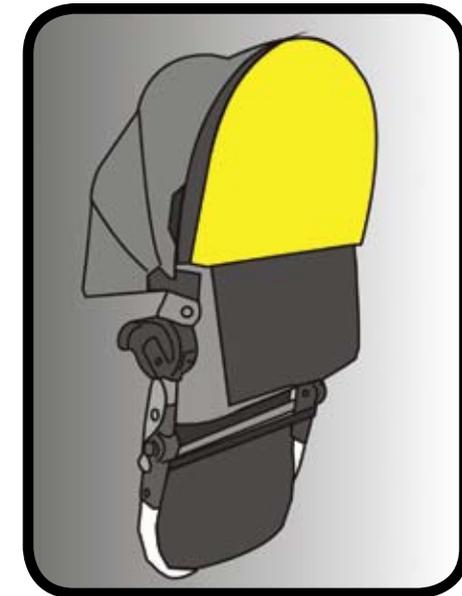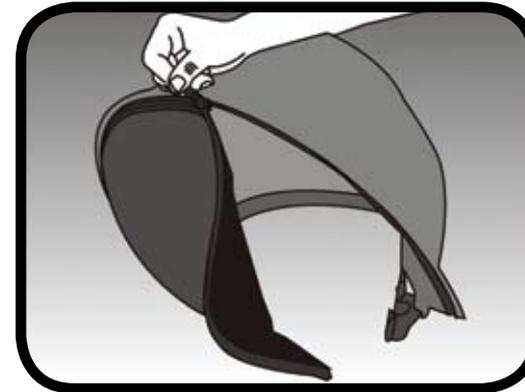


WARNING: Always attach mesh to rear of sun canopy and pull down behind seat when used in conjunction with the seat unit.

Seat

To assemble seat:

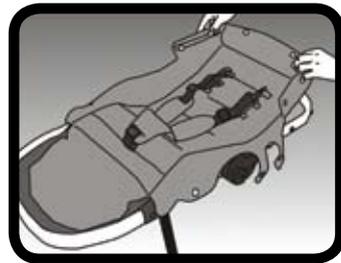


1 To assemble seat: Secure seat fabric to seat frame by lining up snap placement on the frame and fabric.

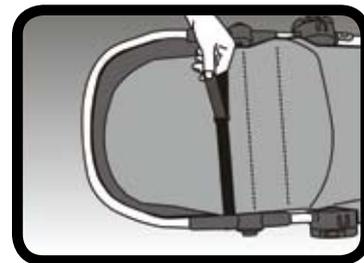

2 Secure seat straps around the bottom of the frame, behind the front wheel. Thread one seat strap through the D ring of the other strap, and fasten both Velcro sides firmly together.

To place seat on frame:

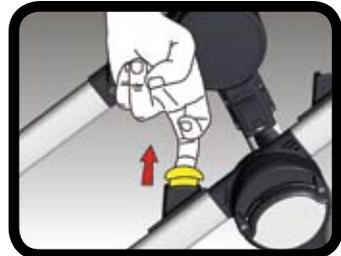

1 Remove mounting bracket plugs by gently pulling on them.



2 Locate desired seat position on stroller frame. Align seat adaptor brackets with mounting brackets on stroller frame.




3 Slide seat into brackets until it clicks into place. Ensure both sides of seat are securely fastened into frame before use.




To remove seat:

1 Press gray tabs on Adaptor Brackets and pull up.


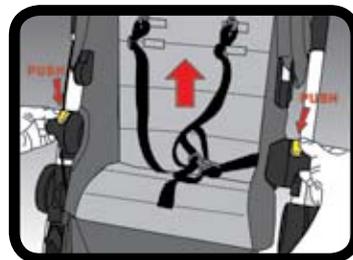


WARNING:
Always remove child from seat before removing seat from frame.

Reclining Seat

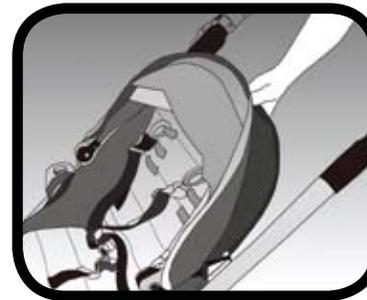


1 Squeeze lever located under the top of the seat, behind the canopy.

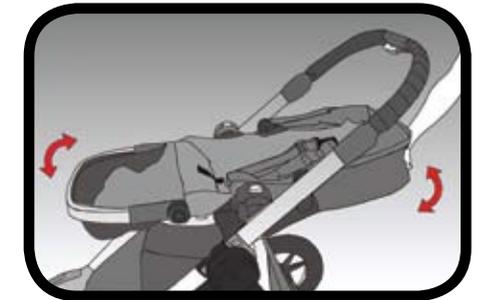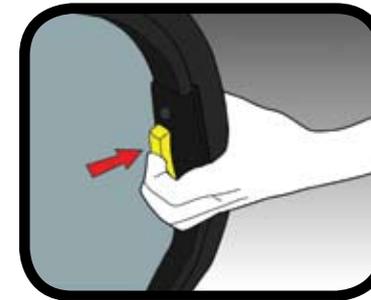

2 Pull down to lower seat and pull up to raise seat until it clicks into the desired position.

Adjustable Footwell

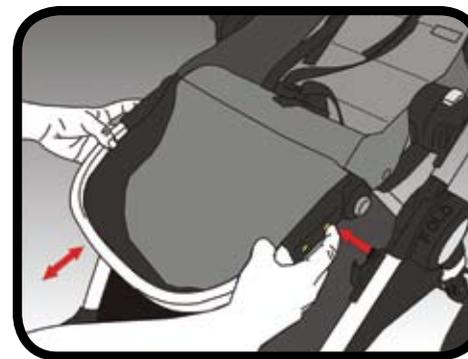


1 To lengthen or shorten footwell: Press buttons on lower portion of footwell and slide in or out until it clicks into place.




2 To raise or lower footwell: Press buttons on upper portion of footwell and pull up or push down until it clicks into the desired position.


Basket

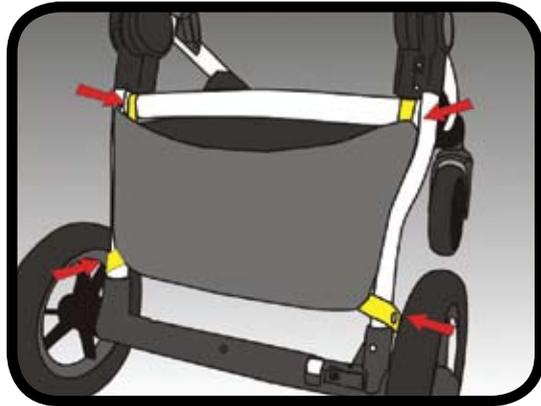

- 1** Fasten top snaps of basket around middle support bar of stroller frame.
- 2** Fasten bottom snaps of basket around side support bars of stroller frame.

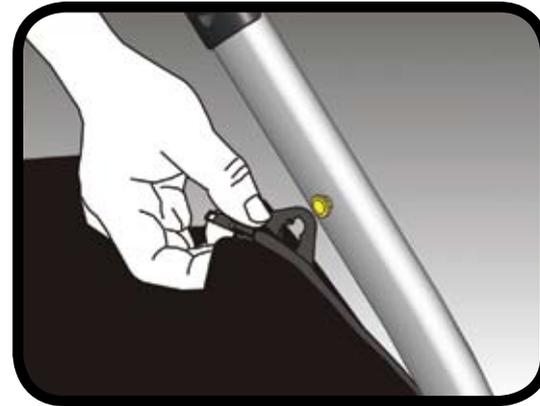


- 3** Hook the top front plastic loop over the metal knob on the front of the frame. Repeat on opposite side.

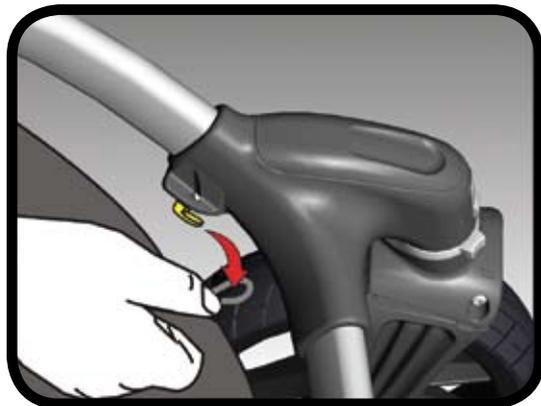



- 4** Hook lower front loop around hook behind front wheel mount.

Quick Fold Technology

Simple Lift & Fold (Patented)

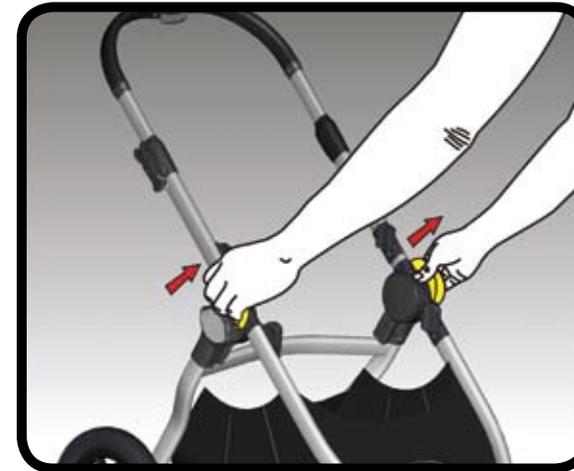

- 1** To fold stroller: Remove child from seat. Pull up on both fold handles at the same time with a gentle tug.

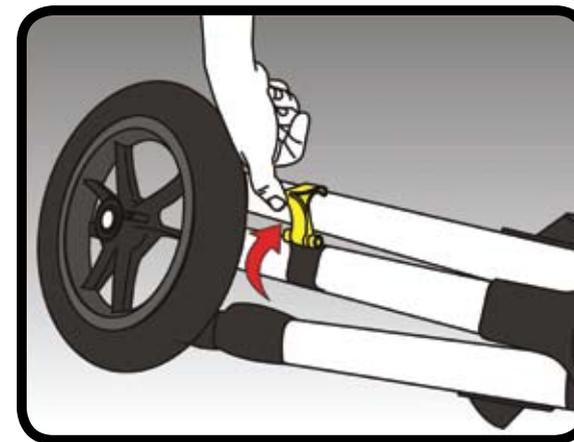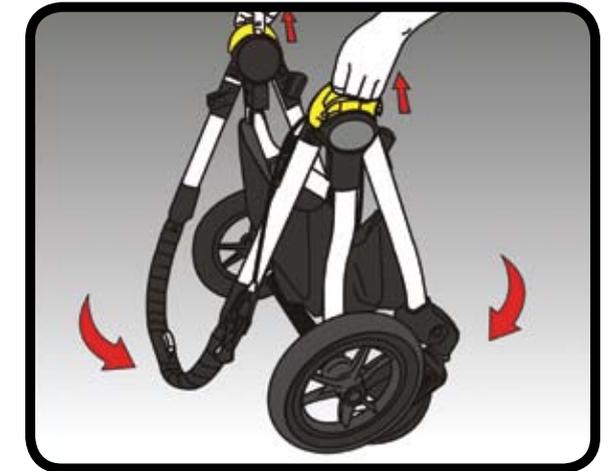

- 2** Snap storage lock around frame to prevent frame from opening when carrying or storing.

As your family grows, so can your City Select...



In Motion

Steering

- Steering your stroller is simple: It is balanced to turn with just a light touch on the handlebar without having to lift the front wheel.

In the Dark

- Since we are concerned about the safety of you and your child, we recommend that you not use your stroller at night. However, if you choose to, please attach reflective strips to the wheels and the seat. Bicycle lights can also be mounted on the handle crossbar. These accessories can be found at most bike stores.

Maintenance

- To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. The tires on your stroller are foam filled. Though the P.S.I is printed on the tire, you will never need to inflate them. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.

Stroller Care

Washing

- You can machine wash your stroller's seat in cold water with a mild detergent. To minimize shrinkage, simply reattach the seat to the frame to dry. (Please do not put the seat in the dryer!)
- Be sure to remove the frame and PE board from the back of the seat before washing.

Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.

Storing

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks. However, if you do store it outside, using a tarp will help protect against weather wear.

WARRANTY REGISTRATION ON-LINE AT www.babyjogger.com/register

Baby Jogger's Limited Lifetime Warranty:

Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect
- Commercial Use
- Improper storage/care of the unit

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

E-MAIL: customerservice@babyjogger.com

CALL: 1-800-241-1848 between 8am – 6pm EST, Mon. – Fri.

FAX: 1-804-262-6277

MAIL: BABY JOGGER COMPANY
8575 Magellan Parkway
Suite 1000
Richmond, VA 23227

Thank You!

We wish you many happy journeys with your new stroller! Your stroller is a great product, and we are proud to manufacture it. If you have any questions or comments, please give us a call at:

1.800.241.1848



H I G H P E R F O R M A N C E S T R O L L E R S

Baby Jogger is a Division of Dynamic Brands

8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227
T: 800.241.1848 • F: 804.262.6277 • www.babyjogger.com