



HIGH PERFORMANCE STROLLERS

# Assembly Instructions



## City Mini Single

**Amazing 360° Turns**

**Make For Extreme Maneuverability**

*This product complies with BS EN 1888:2003 inc. A1,2,3: 2005*

*This product complies with ASTM F833-07a*

*Read these instructions carefully before use and keep them for future reference.*

*Your child's safety may be affected if you do not follow these instructions.*

## For the sake of your precious cargo, please read these warnings before using your stroller.

- **WARNING:** DO NOT exceed 3mph. – this stroller is not suitable for running, jogging, skating or roller blading.
- **WARNING:** Prevent serious injury to your child by always using the safety harness.
- **WARNING:** Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
- **WARNING:** Never leave your child unattended.
- **WARNING:** Recommended weight for seat pocket is 2 pounds and basket is 10 pounds. Excessive weight may cause a hazardous unstable condition to exist.
- **WARNING:** Stroller is not meant to be used for transporting children up or down stairs. Damage resulting to stroller, will not be covered under warranty.
- **WARNING:** Child may slip into leg openings and strangle. Never use in reclined carriage position unless safety harness is properly fastened.
- Accessories which are not approved by the manufacturer or distributor shall not be used.
- The passenger shall remain seated (no standing in the stroller).
- Watch out for cars – never assume that a driver can see you and your child.
- Total weight load recommended for this stroller is 50 lbs. (combined passenger and baggage weight.)
- This stroller seats one passenger.
- It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer.

## Frame



**WARNING:** Ensure all locking devices are engaged before use.



**1.** Unpack stroller from box and set wheels aside.



**2.** Begin to unfold stroller by pushing the bottom frame up and away from the handle.



**3.** The stroller will click into place.



**4.** Turn stroller over to upright position. Snap safety strap to frame before use.

**To fold:** Unsnap safety strap from frame and pull up on fold strap.

# Front Wheel



- 1** To install front wheel, lay stroller back so the handle is resting on floor.
- 2** Insert the front wheel by sliding the axle into the wheel end. Make sure the front wheel is locked into place.

## Swivel/Straight Feature



- Raise the lever **up** to allow the front wheel assembly to **swivel**.
- Press the lever **down** to lock the front wheel assembly in the **straight** position.

**NOTES:** When loading and unloading child, always press the lever down to lock the front wheel straight.

# Rear Wheels



- 1** Align wheel with axle.



- 2** To insert, press the wheel button while gently sliding the axle into the wheel's axle end. You will feel the wheel click into place.

To remove the rear wheels, press the wheel button while gently sliding the wheel away from the axle.

# Safety Harness



**1** Unclip top of shoulder strap from the seat and re-clip on the pair of seat loops closest to child's shoulder height.



**2** To adjust the shoulder and crotch strap length: Remove the shoulder pads and move the plastic guide up or down to lengthen or shorten.



**3** To buckle: Fasten both shoulder strap buckles into the crotch strap buckle. The buckles should always be clicked into place before use.

To unbuckle: Press both sides of the shoulder buckles to release them from the crotch buckle, one at a time.



**WARNING:** Always use the crotch strap in combination with the shoulder straps and waist belt.

# Brake



- Simply push brake pedal down to engage rear parking brake and lift up to release.



**WARNING:** Engage parking device before loading and unloading passenger.

# Canopy



**1** To attach canopy to frame, simply slide canopy axle into the top hole of the bracket on the frame, until you hear it click into place. The bottom hole can be used for accessories, and they should be inserted into the bracket the same way as the canopy.



**2** To remove the canopy, stand facing the stroller and press the bracket buttons with index finger while removing the canopy from the bracket.

# Seat



**WARNING:** Always be sure the safety strap is securely snapped onto the frame before using stroller!



**1** Snap seat to frame, starting with the top snap closest to the handle, and working your way down to the frame behind the front wheel.



**2** Secure top of seat around frame with Velcro tab, after snapping the webbing to the frame underneath.



**3** Secure seat straps around the bottom of the frame, behind the front wheel. Thread one seat strap through the D ring of the other strap, and fasten both Velcro sides firmly together.



**4** Secure safety straps to both sides of the frame before use.



**5** Be sure that fold strap rings are secured to the frame before use.



*To fold stroller:* Remove child from seat. Unsnap safety straps from frame and pull upwards on the fold strap with a gentle tug.

# Reclining Seat



- 1 *To recline:* Pinch the clamp behind the seat, and slide it down to desired recline. Pull seat down on both sides to match recline position of clamp.



- *Weather Cover:* If desired, pull weather cover down and over the seat back mesh. Secure firmly over both sides of seat. When not in use, roll weather cover up and fasten with elastic loop and barrel provided under top of the seat fabric.

*Reverse steps to return to the upright position.*

# Basket



- 1 Wrap webbing around stroller frame tube.



- 2 Snap basket webbing together. On the back side of the stroller, the basket should rest between upright frame and crossbar.

**NOTE:** *The rear of basket has the mesh material and the front does not.*

# Quick Fold Technology

**Simple Lift & Fold** (Patented)



**WARNING:** Always be sure the safety strap is securely snapped onto the frame before using stroller!



*To fold stroller:*

- 1 Remove child from seat. Remove safety straps from frame. Pull upwards on the fold strap with a gentle tug.



# In Motion

## Steering

- Steering your stroller is simple: It is balanced to turn with just a light touch on the handlebar without having to lift the front wheel.

## In the Dark

- Since we are concerned about the safety of you and your child, we recommend that you not use your stroller at night. However, if you choose to, please attach reflective strips to the wheels and the seat. Bicycle lights can also be mounted on the handle crossbar. These accessories can be found at most bike stores.

## Maintenance

- To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.

# Stroller Care

## Washing

- You can machine wash your stroller's seat in cold water with a mild detergent. To minimize shrinkage, simply reattach the seat to the frame to dry. (Please do not put the seat in the dryer!)
- Be sure to remove the frame from the back of the seat before washing.



## Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.

## Storing

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks. However, if you do store it outside, using a tarp will help protect against weather wear.

## WARRANTY REGISTRATION ON-LINE AT [www.babyjogger.com/register](http://www.babyjogger.com/register)

### Baby Jogger's Limited Lifetime Warranty:

Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

#### THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect
- Commercial Use
- Improper storage/care of the unit

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

E-MAIL: [customerservice@babyjogger.com](mailto:customerservice@babyjogger.com)

CALL: 1-800-241-1848 between 8am – 6pm EST, Mon. – Fri.

FAX: 1-804-262-6277

MAIL: BABY JOGGER COMPANY  
8575 Magellan Parkway  
Suite 1000  
Richmond, VA 23227



# Thank You!

We wish you many happy journeys with your new stroller! Your stroller is a great product, and we are proud to manufacture it. If you have any questions or comments, please give us a call at:

**1.800.241.1848**



**H I G H P E R F O R M A N C E S T R O L L E R S**

***Baby Jogger is a Division of Dynamic Brands***

8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227  
T: 800.241.1848 • F: 804.262.6277 • [www.babyjogger.com](http://www.babyjogger.com)